

### Wireless Remote Controller

for Selected Sony / Canon / Nikon Cameras

User Manual

### Foreword

Thank you for purchasing SmallRig's product.

### Warnings

- Do not dismantle it at random as it contains electronic components and do not drop or crash.
- Keep it out of the reach of children.
- Please avoid high temperature and high humidity when storing or using this product.
- If you have any questions, please contact the platform for after-sales services.

 Please do not disassemble the product. If you have any questions, please contact the seller to apply after-sales service.



### In the Box

Remote Control x 1 1/4"-20 Screw x 1 User Manual x 2  
CR2032 Battery x 2 Allen Wrench x 1

### Compatibility


Sony: Alpha 7R V / Alpha 7R IV / Alpha 7R III / Alpha 7 IV / Alpha 7 III / Alpha 7S III / Alpha 7 III / Alpha 7C II / Alpha 7C / Alpha 7CR / Alpha 9 II / Alpha 9 / Alpha A1 / FX3 / FX30 / Alpha 6700 / Alpha 6600 / Alpha 6100 / Alpha 6400 / ZV-E1 / ZV-E10 / ZV-1 II / ZV-1 / ZV-1F / DSC-RX100M7  
Canon: EOS R5 / R6 Mark II / R6 / R7 / R8 / R10 / R / RP / R50 / M6 Mark II / M50 / 90D  
Nikon: Z 50 / Z fc / Z 30

### Product Details

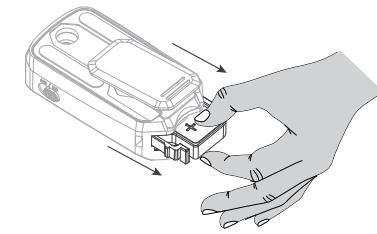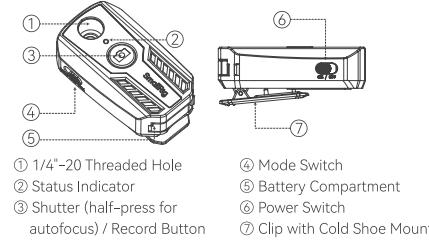


### Preparation Before Use

Step①: Press the position as shown to remove the battery compartment.

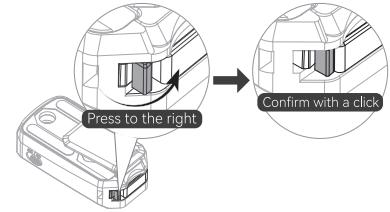

Step②: Install the included battery with the "+" pole facing up.

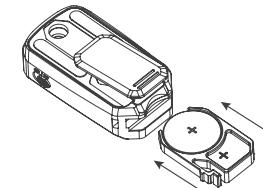

### Pairing Steps


Brand	Sony	Nikon	Canon	
Compatibility	Alpha 7R V / Alpha 7R IV / Alpha 7R III / Alpha 7 IV / Alpha 7 III / Alpha 7S III / Alpha 7 III / Alpha 7C II / Alpha 7C / Alpha 7CR / Alpha 9 II / Alpha 9 / Alpha A1 / FX3 / FX30 / Alpha 6700 / Alpha 6600 / Alpha 6100 / Alpha 6400 / ZV-E1 / ZV-E10 / ZV-1 II / ZV-1 / ZV-1F / DSC-RX100M7	Z 50 / Z fc / Z 30	EOS R5 / R6 / R7 / R10 / M6 Mark II / 90D	EOS R6 Mark II / R8 / R50
Pairing steps	<p>① Adjust the remote control power switch to [ON], the status indicator flashes and then goes out, confirm the mode switch adjustment to [LOCK]  ② Adjust the camera settings  a. Select MENU—[Network]—[Transfer / Remote]—[BLE Rmt Ctrl]—[On]  b. Select MENU—[Network]—[BLE function]—[On]  c. Select MENU—[Network]—[BLE Settings]—[Pairing]  ③ Press and hold the remote shutter / record button until the indicator flashes and the camera screen prompts [Allow connection from the device—Connected device: SR-RC3], select [OK]  ④ When pairing is complete, [Paired] appears, select [OK]  ⑤ Combined with the actual shooting needs, adjust the remote control mode switch to [STILL] (shutter) or [MOVIE] (record)  Note: The remote control mode needs to be the same as the camera mode. R6 camera selects [MOVIE] mode, please select [MENU]—[camera icon]—[6]—[Remote control]—[Enable]</p>	<p>① Adjust the remote control power switch to [ON], the status indicator flashes and then goes out, confirm the mode switch adjustment to [LOCK]  ② Adjust camera settings  a. Select MENU—[SETUP MENU]—[Wireless remote (ML-L7) options]—[On]  b. Select MENU—[SETUP MENU]—[Wireless remote (Remote)]—[Add a device to connect to]  The camera screen prompts [Pairing in progress. Start pairing on the Wireless Remote.]  ③ Press and hold the remote shutter / record button until the indicator flashes and the camera screen indicates [Paired with: SR-RC3], select [OK] to complete the pairing  ④ Combined with the actual shooting needs, adjust the remote control mode switch to [STILL] (shutter) or [MOVIE] (record). If you choose [STILL] mode, on the camera home page select [SET]—[Drive mode]—[Self-timer: 10sec/remote] or [Self-timer: 2sec/remote]  Note: The remote control mode needs to be the same as the camera mode. R6 camera selects [MOVIE] mode, please select [MENU]—[camera icon]—[6]—[Remote control]—[Enable]</p>	<p>① Adjust the remote control power switch to [ON], the status indicator flashes and then goes out, confirm the mode switch adjustment to [LOCK]  ② Adjust camera settings  a. Select MENU—[Communication functions]—[BLE settings]—[Enable]  b. Select MENU—[Communication functions]—[Connect to Wireless Remote]—[Add a device to connect to]  The camera screen prompts [Pairing in progress. Start pairing on the Wireless Remote.]  ③ Press and hold the remote shutter / record button until the indicator flashes and the camera screen indicates [Paired with: SR-RC3], select [OK] to complete the pairing  ④ Combined with the actual shooting needs, adjust the remote control mode switch to [STILL] (shutter) or [MOVIE] (record). If you choose [STILL] mode, on the camera home page select [SET]—[Drive mode]—[Self-timer: 10sec/remote] or [Self-timer: 2sec/remote]  Note: The remote control mode needs to be the same as the camera mode.</p>	
Q&A①: Unable to pair or failed to pair	<p>① Confirm that the remote control mode switch has been adjusted to [LOCK]  ② Restart the controller and camera setting [BLE Function], and then repeat the procedure all over again  ③ Check if the camera's firmware is the most updated one</p>	<p>① Confirm that the mode switch of the remote control has been adjusted to [LOCK]  ② If the camera is already connected to other wireless remote control, you need to delete the connection information before connecting to the new device  Select MENU—[SETUP MENU]—[Wireless remote (ML-L7) options]—[Delete wireless remote controller]  ③ Restart the camera and remote control  ④ Check if the camera's firmware is the most updated one</p>	<p>① Confirm that the remote control mode switch has been adjusted to [LOCK]  ② If the camera is already connected to other wireless remote control, you need to delete the connection information before connecting to the new device  Select MENU—[Communication functions]—[BLE settings]—[Delete connection information]—[OK]. Follow the pairing steps to re-pair  ③ Restart the camera and remote control  ④ Check if the camera's firmware is the most updated one</p>	<p>① Confirm that the remote control mode switch has been adjusted to [LOCK]  ② If the camera is already connected to other wireless remote control, you need to delete the connection information before connecting to the new device  Select MENU—[Communication functions]—[Connect to Wireless Remote]—[Delete connection information]—[OK]. Follow the pairing steps to repair  ③ Restart the camera and remote control  ④ Check if the camera's firmware is the most updated one</p>
Q&A②: Does not work after successful pairing	<p>① Make sure the remote control mode switch is adjusted to [STILL] or [MOVIE]  ② Confirm the setting on the camera, select MENU—[Network]—[Transfer / Remote]—[BLE Rmt Ctrl] and make sure that [On] is selected  ③ Check if the memory card is full. If it is full, replace the memory card. When the memory card is full, the camera does not respond when you press the shutter / record button</p>	<p>① Make sure the remote control and camera are in the same mode [STILL] or [MOVIE]  ② Check if the memory card is full. If it is full, replace the memory card. When the memory card is full, the camera does not respond when you press the shutter / record button</p>	<p>① Confirming the setting on the camera, select MENU—[Network]—[Transfer/Remote]—[BLE Rmt Ctrl] and make sure that [On] is selected  ② Check that the remote control and camera are in the same mode. If you choose [STILL] mode, make sure the camera home page—[SET]—[Drive mode]—[Self-timer: 10sec/remote] or [Self-timer: 2sec/remote] is selected. When the R6 camera selects [MOVIE] mode, please make sure that [MENU]—[camera icon]—[6]—[Remote control]—[Enable] has been selected  ③ Check if the memory card is full. If it is full, replace the memory card. When the memory card is full, the camera does not respond when you press the shutter / record button</p>	<p>① Confirming the setting on the camera, select MENU—[Communication functions]—[BLE settings] and make sure that [Enable] is selected  ② Check that the remote control and camera are in the same mode. If you choose [STILL] mode, make sure the camera home page—[SET]—[Drive mode]—[Self-timer: 10sec/remote] or [Self-timer: 2sec/remote] is selected  ③ Check if the memory card is full. If it is full, replace the memory card. When the memory card is full, the camera does not respond when you press the shutter / record button</p>

### Indicator Light Description


Battery power 20% - 100%: blue light  
Battery power 10% - 20%: red light  
Battery power <10%: red light flashing

### Remote Control Mounting

① Clip with Cold Shoe Mount Installation:  
Attach to a cold shoe mount

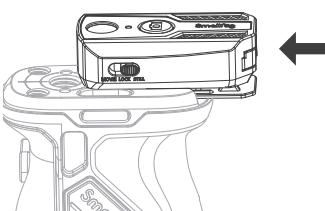

② 1/4"-20 Screw Installation: Remove the clip with cold shoe mount, attach to a device with 1/4"-20 threaded hole via a 1/4"-20 screw.

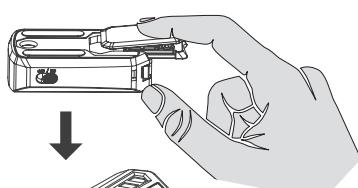

### Attention

- ① Do not ingest battery. This product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- ② Keep new and used batteries away from children.
- ③ If the battery compartment does not close securely, stop using the product and keep it away from children.
- ④ If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- ⑤ The remote control connection procedure may vary from camera to camera, please refer to the remote control section in the camera manual for details.
- ⑥ The Bluetooth connection range of 100cm / 32.8in is an estimation, which depends on your surroundings.
- ⑦ A remote control can only be paired with one camera, if you need to control another camera, refer to the pairing procedure to pair the remote control with the camera you need to control, and the previous camera will be unpaired automatically.
- ⑧ After successful pairing, the camera and the remote control will connect automatically when the camera and remote control is switched on.
- ⑨ Please turn off the Power Switch when not in use.

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio / TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party, Responsible for compliance could void the user's authority to operate this equipment. (Example: use only shielded interface cables when connecting to computer or peripheral devices). This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

(1) Cet appareil ne doit pas causer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance, cet appareil est conforme aux limites d'évaluation courante dans la section 6.3 du crr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité. This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction. Cet équipement respecte les limites d'exposition aux radiations établies par le ccr pour un environnement non contrôlé. Cet équipement peut être utilisé dans des conditions d'exposition portables sans restriction. Cet équipement est conforme aux limites d'exposition dans un environnement non contrôlé.

FCC ID: 2BC2U-3902B Model: 3902B  
CMIT ID: 25J44G013902 IC: 31675-3902B  
HVIN: 3902B  
Manufacturer: Email: support@smallrig.com  
Address: Room 101, 701, 901, Building 4, Gongnianji Innovation Park, No. 58, Ping'an Road, Dafu Community, Guanlan Street, Longhua District, Shenzhen, Guangdong, China.

Consignor: Shenzhen Leo Imaging Co., Ltd.  
Add: Room 201, Building 4, Gongnianji Innovation Park, No. 58, Ping'an Road, Dafu Community, Guanlan Street, Longhua District, Shenzhen, Guangdong, China.

FR: LE TRI + FACILE Boîte 1 Passez à  
REF: REFRIGÉRÉ + FROZEN Boîte 2 Passez à  
REF: REFRIGÉRÉ + FROZEN Boîte 3 Passez à  
REF: REFRIGÉRÉ + FROZEN Boîte 4 Passez à

### Service & Warranty

Please keep your original receipt and guarantee card. Be sure the dealer has written on it the date of purchase and SN of the product. These are required for warranty service.

### After-sale Warranty Terms:

SmallRig products are entitled to warranty services as of the date of payment.

• Electronic products (except V mount battery): 1-year warranty.

• V mount battery: 2-year warranty.

• Non-electronic products: 2-year warranty.

Note: In case of any conflict between our warranty period policy and applicable laws and regulations of the country / region where the products are sold, the latter shall prevail.

### This Warranty Does Not Cover:

If users fail to adhere to the "Operating Instruction" or any "Warnings" stated in the user manual, resulting in a quality failure, it falls outside the scope of warranty coverage.

The product identification or SN label is removed or defaced in any way.

Product damage caused by problems not attributable to the quality of the products such as improper use of the products.

Product damage caused by unauthorized modification, disassembly, repair and other acts.

Product damage caused by fires, floods, lightning and other force majeure factors.

### Warranty Mode:

For the products within the scope of warranty, SmallRig will repair or replace them on the basis of specific failures; the repaired / replaced products / parts are entitled to the remaining part of the original warranty period.

### Contact Information:

You're advised to contact the online customer service personnel of corresponding shopping platform and submit a repair service application.

You may also apply for repair service through SmallRig's service email.

Service Email: support@smallrig.com

### Guarantee Card

ID No.	Item Name	Purchase Date
User Name	Mobile	Address
Receipt		



### Specifications

Operating Voltage	3.0V
Operating Current	≤ 5mA
Battery Parameters	3.0V / 225mAh / 0.675Wh
Control Range	~10m / 32.8ft
Operating Temperature	-10°C to 45°C / 14°F to 113°F
Product Dimensions	53.2 x 32.4 x 22.5mm / 2.1 x 1.27 x 0.86in
Net Weight	18.0 ± 5.0g / 0.6 ± 0.2oz
Material(s)	ABS + PC

Data sourced from SmallRig lab. Results may vary with test environment.

### SmallRig Up APP

#### (1) Download the APP.


You can download the "SmallRig Up" app from the application store or Apple Store.

#### (2) APP Purpose:

The latest firmware for the remote controller can be downloaded and updated through the SmallRig Up app.

#### (3) Note:

1. Please ensure that the remote controller's battery indicator light is blue and that your phone has sufficient battery before proceeding with the update.
2. During the update process, do not press any buttons or switches on the remote controller.

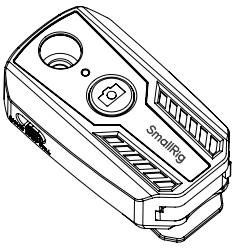

## 无线遥控器

(适用于索尼 / 佳能 / 尼康)

用户手册

## 前言

感谢您购买SmallRig产品。

## 重要提示

- 本产品内部含有电子元件,请勿擅自拆机,同时避免高处跌落或强烈撞击。
- 请将本产品放置在儿童不能接触的地方。
- 存放或使用本产品时请避免高温、高湿场所。
- 如您对产品有任何疑问,请联系购买平台,申请售后处理。

请勿拆卸产品,如果您怀疑产品有任何问题,请联系购买平台,申请售后处理。

## 包装清单

遥控器	× 1	1/4"-20 螺丝	× 1	用户手册	× 2
CR2032 电池	× 2	六角扳手	× 1		

## 适配性

索尼: Alpha 7R V / Alpha 7R IV / Alpha 7R III / Alpha 7 IV / Alpha 7 III / Alpha 7S III / Alpha 7C II / Alpha 7C / Alpha 7CR / Alpha 9 II / Alpha 9 / Alpha A1 / FX3 / FX30 / Alpha 6700 / Alpha 6600 / Alpha 6100 / Alpha 6400 / ZV-E1 / ZV-E10 / ZV-1 II / ZV-1 / ZV-1F / DSC-RX100M7  
佳能: EOS R5 / R6 Mark II / R6 / R7 / R8 / R10 / R / RP / R50 / M6 Mark II / M50 / 90D  
尼康: Z 50 / Z fc / Z 30

## 配对步骤


品牌	索尼	尼康	佳能	
适配机型	Alpha 7R V / Alpha 7R IV / Alpha 7R III / Alpha 7 IV / Alpha 7 III / Alpha 7S III / Alpha 7C II / Alpha 7C / Alpha 7CR / Alpha 9 II / Alpha 9 / Alpha A1 / FX3 / FX30 / Alpha 6700 / Alpha 6600 / Alpha 6100 / Alpha 6400 / ZV-E1 / ZV-E10 / ZV-1 II / ZV-1 / ZV-1F / DSC-RX100M7	Z 50 / Z fc / Z 30	EOS R5 / R6 / R7 / R10 / M6 Mark II / 90D	EOS R6 Mark II / R8 / R50
配对步骤	<p>① 将遥控器电源开关调节至【ON】，LED指示灯闪烁后熄灭，确认模式切换开关调节至【LOCK】  ② 调整相机设置  a. 选择MENU—【网络】—【传输/远程】—【BLE遥控】—【开】  b. 选择MENU—【网络】—【BLE设置】—【BLE功能】—【开】  c. 选择MENU—【网络】—【BLE设置】—【配对】  ③ 长按遥控器快门/录制按钮直至指示灯闪烁，相机屏幕提示【是否允许与本机配对? 已连接装置: SR-RC3】，选择【确定】  ④ 屏幕显示【已配对】，再次点击【确定】即完成配对  ⑤ 结合实际拍摄需求，调节遥控器模式切换开关至【STILL】(快门)或【MOVIE】(录制)  注: 遥控器模式需要与相机模式一致。R6相机选择【MOVIE】模式下，选择【MENU】—【相机图标】—【6】—【遥控】—【启用】</p>	<p>① 将遥控器电源开关调节至【ON】，LED指示灯亮后熄灭  ② 调整相机设置  a. 选择MENU—【BL-E设置】—【启用】  b. 选择MENU—【无线/BL-E连接】—【连接至无线遥控器】—【保存至无线遥控器】  ③ 长按遥控器快门/录制按钮直至指示灯闪烁后松手  ④ 配对成功后，屏幕显示【无线遥控器已保存】  ⑤ 结合实际拍摄需求，调节遥控器模式切换开关至【STILL】(快门)或【MOVIE】(录制)。注: 遥控器模式需要与相机模式一致，快门/录制按钮不支持半按自动对焦</p>	<p>① 将遥控器电源开关调节至【ON】，LED指示灯闪烁后熄灭，确认模式切换开关调节至【LOCK】  ② 调整相机设置  a. 选择MENU—【通信功能】—【BLE设置】—【启用】  b. 选择MENU—【无线/BL-E连接】—【连接至无线遥控器】—【添加要连接的设备】  ③ 长按遥控器快门/录制按钮直至指示灯闪烁，相机屏幕提示【正在进行配对, 开始无线遥控器上的配对】  ④ 长按遥控器快门/录制按钮直至指示灯闪烁，相机屏幕提示【已与SR-RC3配对】，选择【确定】，完成配对  ⑤ 结合实际拍摄需求，调节遥控器模式切换开关至【STILL】(快门)或【MOVIE】(录制)。如选择【STILL】模式，在相机主页选择【SET】—【驱动模式】—【自拍: 10秒/遥控】或【自拍: 2秒/遥控】  注: 遥控器模式需要与相机模式一致。R6相机选择【MOVIE】模式下，选择【MENU】—【相机图标】—【6】—【遥控】—【启用】</p>	
Q&A①: 无法配对 或配对失败	<p>① 确认遥控器模式切换开关已调节至【LOCK】  ② 重新配对及相机【BLE功能】，从头开始重新执行上述配对步骤  ③ 检查相机固件版本是否为最新版本</p>	<p>① 确认遥控器模式切换开关已调节至【LOCK】  ② 如果相机已经连接其它无线遥控器，需要删除连接信息后才能连接新设备  选择MENU—【设置菜单】—【无线遥控(ML-L7)】选项—【删除无线遥控器】  ③ 重启相机和遥控器  ④ 检查相机固件版本是否为最新版本</p>	<p>① 确认遥控器模式切换开关已调节至【LOCK】  ② 如果相机已经连接其它无线遥控器，需要删除连接信息后才能连接新设备  选择MENU—【无线/BL-E连接】—【连接至无线遥控器】—【通信功能】—【连接至无线遥控器】—【删除连接信息】—【确定】，按照配对步骤重新进行配对  ③ 重启相机和遥控器  ④ 检查相机固件版本是否为最新版本</p>	
Q&A②: 配对成功后 无法正常使用	<p>① 确认遥控器模式开关已调节至【STILL】或【MOVIE】  ② 检查确认MENU—【网络】—【传输/远程】—【BLE遥控】设置为【开】  ③ 检查储存卡是否已满，如果已满，请更换储存卡；储存卡已满时，按下快门/录制按钮相机无反应</p>	<p>① 确认遥控器和相机处于相同模式【STILL】或【MOVIE】  ② 检查储存卡是否已满，如果已满，请更换储存卡；储存卡已满时，按下快门/录制按钮相机无反应</p>	<p>① 检查MENU—【通信功能】—【BLE设置】处于【启用】状态  ② 确认遥控器和相机处于相同模式【STILL】或【MOVIE】。如选择【STILL】模式，确认相机主页—【SET】—【驱动模式】—【自拍: 10秒/遥控】或【自拍: 2秒/遥控】已选择。R6相机选择【MOVIE】模式下，请确认【MENU】—【相机图标】—【6】—【遥控】—【启用】已选择  ③ 检查储存卡是否已满，如果已满，请更换储存卡；储存卡已满时，按下快门/录制按钮相机无反应</p>	

## 指示灯说明


电池电量20% ~ 100%: 蓝灯  
电池电量10% ~ 20%: 红灯  
电池电量< 10%: 红灯闪烁

## 安装方式

① 冷靴夹安装: 通过冷靴夹, 夹在内置冷靴的设备上。

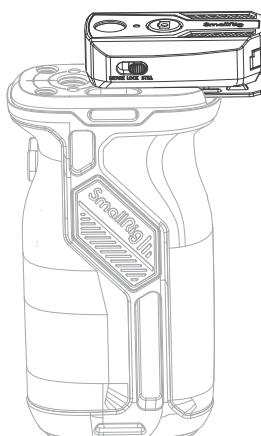



② 1/4"-20 螺丝安装: 拆卸冷靴夹后, 通过1/4"-20螺丝将遥控器固定至内置1/4"-20螺纹孔设备上。

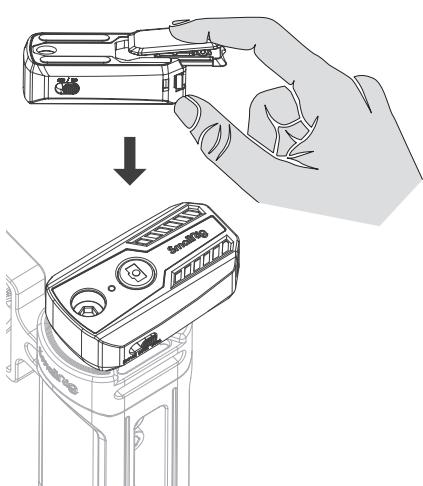


## 注意事项

- ① 请勿吞食电池, 有化学烧伤风险。本产品含有纽扣电池。如果吞食纽扣电池, 2小时内就会造成严重的内部烧伤, 并可能导致死亡。
- ② 请将新电池和旧电池放在远离儿童的地方。
- ③ 如果电池盒无法牢固关闭, 请停止使用产品并让产品远离儿童。
- ④ 如果您认为电池可能被吞食或放置在身体的任何部位, 请立即就医。


## 产品介绍

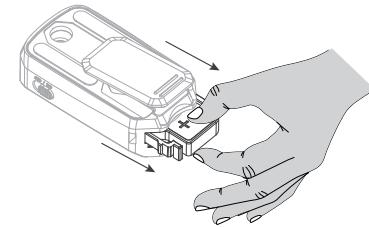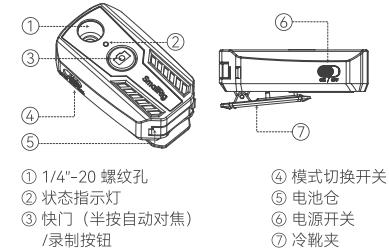

步骤①: 按压如图位置, 取出电池仓。

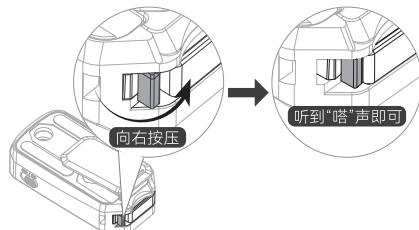


步骤②: 安装附赠电池, “+”极朝上。

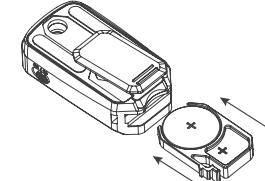

## 使用前准备

步骤①: 按压如图位置, 取出电池仓。

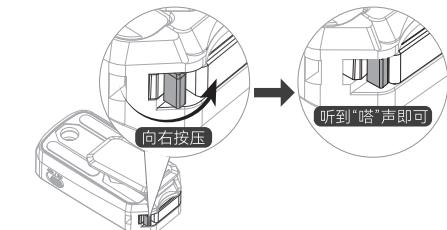

## 保修条款

## 保修条款

请保留您的原始购买单据及保修卡, 同时包含您的购买日期、产品序列号等, 这些资料质保服务时均需要提供。

## 售后质保条款:

SmallRig产品自下单付款之日起享有质保服务。

· 电子产品(除V口电池): 1年质保。

· V口电池: 2年质保。

· 非电子产品: 2年质保。

注: 若销售地国家或地区的适用法律法规有冲突的, 以销售地国家或地区有关质保期的法律法规为准。

## 质保无效说明:

· 当用户违反操作指引或用户手册中“重要提示”任何一条导致的质量失效, 不在质保范围内。

· 产品序列号标识已经被撕毁或无法辨识, 不在质保范围。

· 产品使用不当等非产品本身质量问题, 而造成的产品损坏, 不在质保范围。

· 非官方指导的私自改装、拆解、维修等行为而造成的损坏, 不在质保范围。

· 因火灾、水灾、雷击等不可抗拒力造成的产品损坏, 不在质保范围。

## 维修方式:

· 属于质保范围的, SmallRig根据产品具体的故障对产品进行维修或更换; 维修后的产品/部件享受原有保修期的剩余时长。

## 联系方式:

· 建议您优先前往相应购买平台联系在线客服, 提出产品维修申请。

· 您也可以通过SmallRig服务邮箱申请维修服务。

服务邮箱: support@smallrig.com

## 保修卡

ID 编号	
产品名称	
购买日期	
用户姓名	
用户电话	
用户地址	
购买单据	

执行标准: GB 4943.1-2022

LQ-P1620-18

HVIN: 3902B

中国制造

Model : 3902B

